



User Guide

# DEVIreg™ Touch

Electronic Intelligent Thermostat

[www.DEVI.com](http://www.DEVI.com)

**DEVI**® 



---

## Table of Contents

---

<b>1</b>	<b>Introduction</b> . . . . .	<b>4</b>
	1.1 Safety Instructions . . . . .	5
<b>2</b>	<b>Settings</b> . . . . .	<b>6</b>
	2.1 Setting Temperature . . . . .	7
	2.2 Time and Date . . . . .	8
	2.3 Periods with Lowering of Temperature . . . . .	10
	2.4 Away . . . . .	18
	2.5 Minimum Floor Temperature . . . . .	21
	2.6 Restore Default Temperature Settings . . . . .	23
	2.7 Safety Lock . . . . .	24
	2.8 Frost Protection . . . . .	26
	2.9 Energy Consumption . . . . .	29
	2.10 Backlight Level . . . . .	30
	2.11 Language . . . . .	31
	2.12 Turning the Thermostat On/Off . . . . .	32
<b>3</b>	<b>Error Messages</b> . . . . .	<b>33</b>
<b>4</b>	<b>Removing Front Part of Thermostat</b>	<b>34</b>
<b>5</b>	<b>Warranty</b> . . . . .	<b>34</b>
<b>6</b>	<b>Disposal Instruction</b> . . . . .	<b>35</b>

---

## 1 Introduction

---

DEVIreg™ Touch is an electronic thermostat specially designed for floor heating systems. Among others, the thermostat has the following features:



- A touchscreen display with backlight.
- An easy-to-follow menu-driven operation.
- Energy-saving schedule: A standard or customized timer program including fully flexible day and time pattern that lets you preset the temperature to energy-saving levels, e.g. while you are at work or asleep - and with optimum heating start/stop to reach the desired temperature at the right time.
- Open window detection that prevents excessive heating at sudden drop of temperature.
- Vacation setting: Suspension of normal program schedule for specified periods of time.
- Consumption meter.
- Quick-access button to features such as frost protection and away function.

## 1.1 Safety Instructions

Please observe the following guidelines:


- Do not cover the thermostat, e.g. by hanging towels or similar items in front of it! This will impair the ability of the thermostat to sense and adjust the room temperature correctly.
- Do not spill liquids of any kind into the thermostat.
- Do not open, disassemble, or tamper with the thermostat in any way.
- If the thermostat is installed in a place frequented by small children, use the safety lock.
- Do not interrupt the power supply to the thermostat.
- The installation of the thermostat must be done by an authorized and qualified installer according to local regulations.

## 2 Settings


<b>Basic rules for changing thermostat settings</b>	
Accessing different settings	Directly press the item on the screen you want to access.
To increase a value	Press the > arrow (press and hold to step quickly through the values)
To decrease a value	Press the < arrow (press and hold to step quickly through the values)
To confirm a value	Press  in the top right corner of the screen.
To cancel your changes	Press the back arrow in the top left corner of the screen to go to the previous screen without saving your changes.
To return to normal temperature display	Use the back arrow in the upper left corner of the screen until you reach the main menu screen, then press  in the centre of the main menu screen.

## 2.1 Setting Temperature

When the display is inactive, it shows the actual temperature measured in the room:

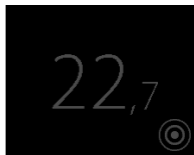

When you activate the display, it shows the temperature that you want (the one you have set):

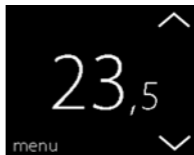

If the system is heating, up arrows will flash to the left of the temperature:



## How to lower or raise the temperature

1. Touch the thermostat display to activate it. Then press the up or down arrow in the right side of the screen.




## 2.2 Time and Date

### How to set the time and date

1. Touch the thermostat display to activate it, then press **menu**.




2. Press **TIME/DATE** in the bottom left corner of the menu. Then press **TIME**.

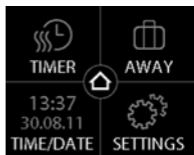





3. Press the hour numbers.

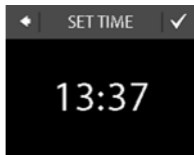


4. Use the arrows < and > to set the hour. Press  to confirm.

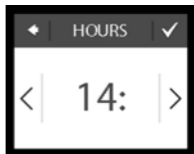

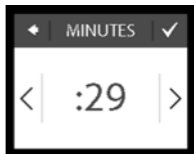


5. Press the minutes numbers and use the arrows < and > to set the minutes. Press  to confirm and press  again to return to the **TIME/DATE** screen.

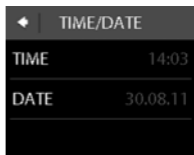


6. Press **DATE**.



7. Press the day, month and year respectively and set the date using the arrows < and > and pressing  to confirm. Press  in the **SET DATE** screen.

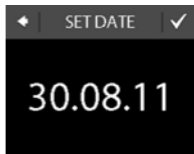

To return to the normal temperature display, press the back arrow in the upper left corner of the screen until you get to the main menu, then press .

### 2.3 Periods with Lowering of Temperature

You can set the thermostat to keep a constant temperature, or let the thermostat automatically switch between periods with a lower temperature (also called economy temperature) and periods with comfort temperature.

By default, the thermostat is set to the following comfort periods:

- Monday - Friday: 6:00 - 8:00 and 16:00 - 22:30.
- Saturday - Sunday: 7:00 - 22:45.

You use the thermostat timer to change the predefined comfort periods and set the comfort and economy temperatures you want. Note: In order to switch between comfort and economy temperatures, the timer function must be activated (ON).


The thermostat has a forecast function. When this function is active (i.e. FORECAST is set to ON when you press SETTINGS menu and then OPTIONS), you only need to select the time at which you require comfort and economy temperatures. The thermostat will then calculate when the heating should start in order to reach the desired temperature at the specified time.

## How to define comfort and economy periods



1. Touch the thermostat display to activate it, then press **menu**.




2. Press **TIMER** in the upper left corner of the menu. Then press **ADJUST SCHEDULE**

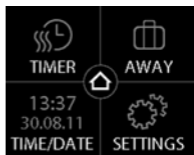

3. Press a day of the week on which you want to switch between comfort and economy periods. You can define up to 2 comfort periods a day (and thereby also 2 economy periods).
4. Press the first time indication (i.e. 06:00 in the displayed example) to define start time for the first comfort period.
5. Press the < and > arrows to set the start time of the comfort period. Press  to confirm.

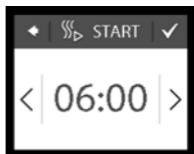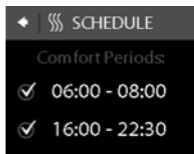


6. Press the end time of the first comfort period to define it (i.e. 08:00 in the displayed example).

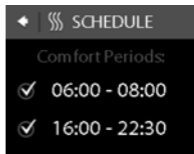


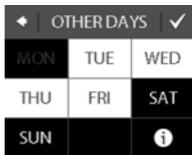
7. Press the < and > arrows to set the end time of the comfort period. Press  to confirm.
8. Repeat Steps 4 to 7 to define the start time and the end time of the second comfort period if you need it. If not, press the check mark next to the second comfort period in order to deactivate it.

Note: All time intervals outside the defined comfort periods are automatically regarded as economy periods.


9. Press  to confirm your comfort periods. A screen will now appear that lets you copy the specified comfort periods to other days of the week.

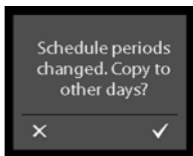

- Click **NO** if the comfort periods only apply to the selected day of the week, or click **YES** to go to a screen where you can select the relevant days. Then press  to copy the comfort periods to these days.



- Repeat Steps 3 to 7 to define comfort periods for other days of the week.


To return to the normal temperature display, press the back arrow in the upper left corner of the screen until you get to the main menu, then press .


## How to define comfort and economy temperatures

- Touch the thermostat display to activate it, then press **menu**.




2. Press **TIMER** in the upper left corner of the menu. Then press **TEMPERATURES**

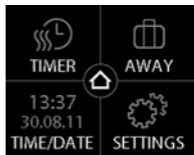


3. Press **COMFORT** and use the arrows < and > to set the comfort temperature. Press  to confirm.



4. Press **ECONOMIC** and use the arrows < and > to set the economy temperature. Press  to confirm.




To return to the normal temperature display, press the back arrow in the upper left corner of the screen until you get to the main menu, then press .

## How to get an overview of defined comfort periods


1. Touch the thermostat display to activate it, then press **menu**.



2. Press **TIMER** in the upper left corner of the menu. Then press **ADJUST SCHEDULE**

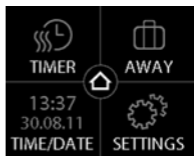


3. Press the information icon in the bottom right corner of the **SELECT DAY** screen.

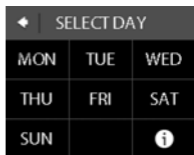




A graphical overview of the defined comfort periods in a week will now appear.



To return to the normal temperature display, press the back arrow in the upper left corner of the screen until you get to the main menu, then press .

## How to turn the timer function on and off

You may for instance want to turn the timer function off temporarily if a short extension of the comfort period is needed.

When the timer is switched off, a hand icon  is shown in the upper part of the thermostat display (to illustrate that temperature regulation is done manually).

1. Press the button on the side of the thermostat.



2. Press **ENABLE TIMER** to turn the timer function on, or **DISABLE TIMER** to turn it off.



## 2.4 Away


### How to suspend normal temperature settings for one or more days

Whatever temperature you set will be maintained 24 hours a day for the number of days you select. After this number of days have elapsed, the normal temperature settings will resume.


1. Touch the thermostat display to activate it, then press **menu**.




2. Press **AWAY** in the upper right corner of the menu. Then press **PERIOD**.

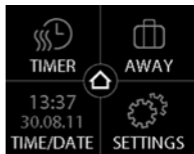



3. Press the start date and use the < and > arrows to set the date. Press  to confirm. To go quickly through the dates, press and hold the arrow < or >.

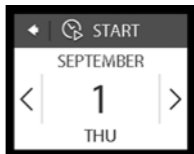


4. Press the end date and use the arrows < and > to set the date. Press  twice to confirm.


5. Press **AWAY TEMP.** and use the arrows < and > to set the temperature while you are away. Press  to confirm.

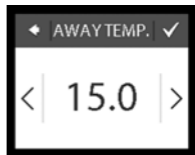

6. Make sure away mode is activated. If not, press **AWAY** and then press **ON**. Press  to confirm.

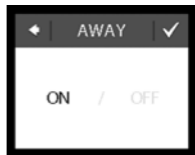

On the specified start date, a suitcase symbol will appear on the display.

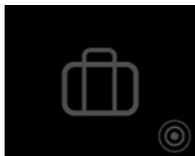

## How to deactivate the away function

If you return earlier than expected, you can deactivate the away mode.

1. Touch the thermostat display to activate it. Then press **off** in the bottom left corner.



## 2.5 Minimum Floor Temperature


### How to set the minimum floor temperature

**Note:** This feature can only be activated if both a room sensor and a floor sensor are available.


1. Touch the thermostat display to activate it, then press **menu**.




2. Press **Settings** in the bottom right corner of the menu. Then press **OPTIONS**.

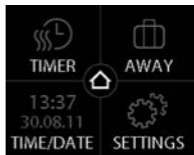

3. Use the arrows in the right side of the screen to go to **MIN. FLOOR TEMP.**, and press to select it. Then press **MIN. FLOOR** and **ON**. Press  to confirm.

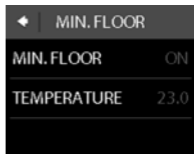

4. Press **TEMPERATURE**. Then use the < and > arrows to set the minimum floor temperature. Press  to confirm.

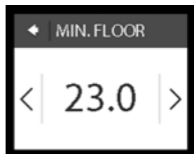

To return to the normal temperature display, press the back arrow in the upper left corner of the screen until you get to the main menu, then press .

The floor temperature is now kept above the specified lower limit.

## 2.6 Restore Default Temperature Settings

### How to restore the default temperature settings


1. Touch the thermostat display to activate it, then press **menu**.




2. Press **Settings** in the bottom right corner of the menu. Then press **OPTIONS**.



3. Use the arrows in the right side of the screen to go to **RE-STORE TEMP.**, and press to select it. Then press  to confirm.

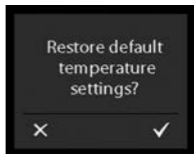

To return to the normal temperature display, press the back arrow in the upper left corner of the screen until you get to the main menu, then press .

## 2.7 Safety Lock


The safety lock is used for locking the screen display in order to prevent undesirable changes of the thermostat settings.

### How to lock the screen display


1. Touch the thermostat display to activate it, then press **menu**.



2. Press **Settings** in the bottom right corner of the menu. Then press **OPTIONS**.

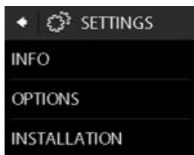


3. Press **SAFETY LOCK**. Then press **ON**. Press  to confirm.

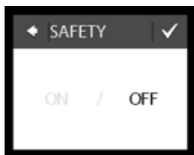



A lock symbol will now appear when you press the display.

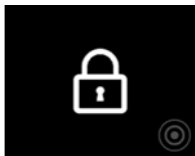


## How to unlock the screen display

1. Press the button on the side of the thermostat.



2. Press  to unlock the screen display.

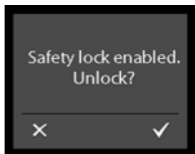

## 2.8 Frost Protection

Frost protection is used for maintaining a certain minimum temperature to ensure frost control (5°C by default).

### How to activate frost protection


1. Press the button on the side of the thermostat.



2. Press **FROST PROTECTION**.



A frost symbol will now appear on the display.

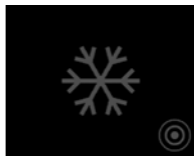

## How to turn frost protection off

1. Touch the thermostat display to activate it. Then press **off** in the bottom left corner.




## How to set the frost protection temperature


1. Touch the thermostat display to activate it, then press **menu**.




2. Press **SETTINGS** in the bottom right corner of the menu. Then press **INSTALLATION** and **MANUAL SETUP**.

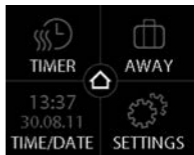

3. Use the arrows in the right side of the screen to go to **FROST TEMP.**, and press to select it. Then use the < and > arrows to set the frost protection temperature. Press  to confirm.

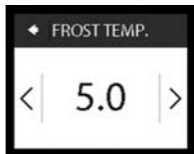

To return to the normal temperature display, press the back arrow in the upper left corner of the screen until you get to the main menu, then press .


## 2.9 Energy Consumption

### How to check your energy consumption


1. Touch the thermostat display to activate it, then press **menu**.




2. Press **Settings** in the bottom right corner of the menu. Then press **Info**.

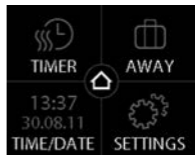

3. Press **Consumption**. Then press the period for which you want to see the energy consumption: last 7 days, last 30 days or total consumption since installation of thermostat.

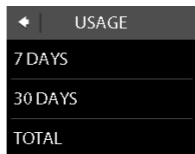


To return to the normal temperature display, press the back arrow in the upper left corner of the screen until you get to the main menu, then press .


## 2.10 Backlight Level

### How to change the backlight


1. Touch the thermostat display to activate it, then press **menu**.

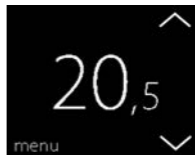

2. Press **SETTINGS** in the bottom right corner of the menu. Then press **OPTIONS**.

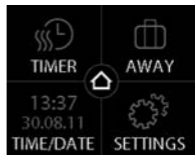

3. Use the arrows in the right side of the screen to go to **DIM LEVEL**, and press to select it. Then press **DIM** to reduce backlight or **OFF** to turn backlight off. Press  to confirm.

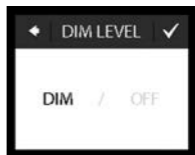

To return to the normal temperature display, press the back arrow in the upper left corner of the screen until you get to the main menu, then press .


## 2.11 Language

### How to select language


1. Touch the thermostat display to activate it, then press **menu**.




2. Press **Settings** in the bottom right corner of the menu. Then press **OPTIONS**.

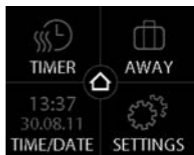

3. Use the arrows in the right side of the screen to go to your language, and press to select it. Then press  in the upper right corner to confirm.

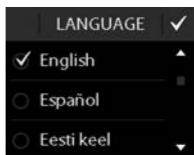

To return to the normal temperature display, press the back arrow in the upper left corner of the screen until you get to the main menu, then press .

## 2.12 Turning the Thermostat On/Off

### How to turn off the thermostat


1. Press the button on the side of the thermostat.



2. Press **POWER OFF**.




A power symbol will now appear on the display.

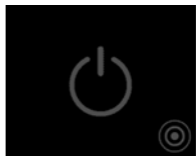






## How to turn on the thermostat

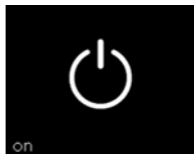1. Touch the thermostat display to activate it. Then press **on** in the bottom left corner.



## 3 Error Messages

Error message	Problem	Solution
	The thermostat has overheated and has switched off.	Let the thermostat cool for period. Then switch the thermostat off and on. If the error persists contact your authorized installer.
	The floor sensor short circuited.	If the error persists contact your authorized installer.
	The floor sensor is disconnected.	If the error persists contact your authorized installer.

## 4 Removing Front Part of Thermostat

When painting, wallpapering or other projects are planned, you can remove the front part of the thermostat from the mounting base.

**Important:** Do NOT press on the display screen when removing the front part nor when clicking it back in place.

Press your fingers under the side of the front part and pull toward you:



To reinstall the thermostat, click it back in place.

## 5 Warranty



---

**6 Disposal Instruction**

---



Danfoss A/S  
Electric Heating Systems  
Ulvehavevej 61  
7100 Vejle  
Denmark  
Phone: +45 7488 8500  
Fax: +45 7488 8501  
E-mail: [EH@DEVI.com](mailto:EH@DEVI.com)  
[www.DEVI.com](http://www.DEVI.com)

---

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. DEVI and the DEVI logo-type are trademarks of Danfoss A/S. All rights reserved.

---